



DEVELOPMENT GUIDE

AMOS-820

Linux BSP v4.1.1



Copyright

Copyright © 2017 VIA Technologies Incorporated. All rights reserved.

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise without the prior written permission of VIA Technologies, Incorporated.

Trademarks

All brands, product names, company names, trademarks and service marks are the property of their respective holders.

Disclaimer

VIA Technologies makes no warranties, implied or otherwise, in regard to this document and to the products described in this document. The information provided in this document is believed to be accurate and reliable as of the publication date of this document. However, VIA Technologies assumes no responsibility for the use or misuse of the information (including use or connection of extra device/equipment/add-on card) in this document and for any patent infringements that may arise from the use of this document. The information and product specifications within this document are subject to change at any time, without notice and without obligation to notify any person of such change.

VIA Technologies, Inc. reserves the right to make changes to the products described in this manual at any time without prior notice.



Revision History

Version	Date	Remarks
1.00	05/24/2017	Initial release



Table of Contents

1. Introduction	1
1.1. Package Contents.....	1
1.1.1. Source code Folder Contents	1
1.1.2. Firmware folder Contents	1
1.1.3. Document Folder Contents	1
1.2. Version Information and Supported Features	2
2. Build Environment Setup	3
2.1. Configuring Linux Host Machine	3
3. Image Build.....	4
3.1. Extracting the AMOS-820 BSP	4
3.2. Machine Configuration	4
3.3. Building a Firmware Installer	4

1. Introduction

The Development Guide explains how to build the Yocto system image on the AMOS-820 system.

The AMOS-820 Linux BSP v4.1.1 is developed based on the NXP fsl-yocto-L4.1.15_1.1.0-ga (Yocto 2.0 Jethro) and enables hardware features that are defined on the AMOS-820 system.

1.1. Package Contents

There are three folders in the package as listed below.

Source code folder	Description
VIA_iMX_Yocto2.0_SRC_v4.1.1.tar.bz2	Source code
Firmware folder	Description
VAB-820_Yocto2.0_BIN_v4.1.1.tar.gz	Yocto EVK system image and installation script files
Document folder	Description
AMOS-820_Linux_BSP_v4.1.1_Quick_Start_Guide_v1.00_20170524.pdf	Quick Start Guide
AMOS-820_Linux_BSP_v4.1.1_Development_Guide_v1.00_20170524.pdf	Development Guide

AMOS-820 Linux BSP contents

1.1.1. Source code Folder Contents

VIA_iMX_Yocto2.0_SRC_v4.1.1.tar.bz2: A complete and static Yocto BSP including the VAB-820 meta-files and all the pre-downloaded required software packages to enable a complete offline build.

1.1.2. Firmware folder Contents

VAB-820_Yocto2.0_BIN_v4.1.1.tar.gz: contains installation script files and the precompiled U-boot and image for evaluating the AMOS-820 system with an OpenEmbedded filesystem.

1.1.3. Document Folder Contents

AMOS-820_Linux_BSP_v4.1.1_Quick_Start_Guide_v1.00_20170524.pdf: The Quick Start Guide provides an overview how to boot the Android EVK system image on the AMOS-820 board and configure the supported hardware function in the build

AMOS-820_Linux_BSP_v4.1.1_Development_Guide_v1.00_20170524: The Development Guide explains how to build the Yocto system image on the AMOS-820 system

1.2. Version Information and Supported Features

- U-Boot version: 2015.04
- Kernel version: 4.1.15
- Evaluation image: OpenEmbedded-core built with Yocto 2.0 Jethro
- Development based on NXP fsl-yocto-L4.1.15_1.1.0-ga (Yocto 2.0 Jethro)
- Supports SPI with eMMC or Micro SD boot (default)
- Supports HDMI display
- Supports HDMI audio output
- Supports CVBS
- Supports COM1 DTE mode, COM2 as debug port
- Supports 2 FlexCAN TX/RX
- Supports Gigabit Ethernet
- Supports Line-in, Line-out, and Mic-in
- Supports VNT9271 USB Wi-Fi dongle
- Supports EMIO-1541 miniPCle Wi-Fi module
- Supports EMIO-2531 miniPCle Wi-Fi & BT module
 - Supports Bluetooth A2DP and SPP profile
- Supports EMIO-2550 miniPCle Mobile Broadband module
- Supports Watchdog Timer, GPIO and RTC

2. Build Environment Setup

This section guides you through setting up the build environment for development. All instructions are based on using Ubuntu 12.04 LTS and later versions.

To make sure that the build process completes successfully, we recommend at least 120GB of disk space and 15GB of combined memory and swap space on the host machine.

2.1. Configuring Linux Host Machine

The following packages are required for the Yocto development environment. The required packages can be installed using the bash script below:

```
#!/bin/bash

# Install dependant packages
$ sudo apt-get install gawk wget git-core diffstat unzip texinfo gcc-multilib build-essential chrpath socat

$ sudo apt-get install libstdc++6-dev xterm sed cvs subversion coreutils texi2html docbook-utils python-pysqlite2 help2man make gcc g++ desktop-file-utils libglib2.0-dev libglu1-mesa-dev mercurial autoconf automake groff curl lzop asciidoc
```

The tool to create images for use with the U-Boot boot loader, “**mkimage**”, is provided by different packages in Ubuntu 12.04 and in newer Ubuntu releases.

On Ubuntu 12.04 install it as below.

```
$ sudo apt-get install uboot-mkimage
```

On Ubuntu 14.04 and newer versions install it as below.

```
$ sudo apt-get install u-boot-tools
```

3. Image Build

The section explains how to use the source code to build and update the u-boot and image to the firmware installer on the AMOS-820 board.

3.1. Extracting the AMOS-820 BSP

Use the following command to extract the contents of the base BSP.

```
$ tar xvf VIA_iMX_Yocto2.0_SRC_v4.1.1.tar.bz2
```

3.2. Machine Configuration

The **via-setup-release.sh** script creates the build directory with the Yocto configuration files for your target machine.

This script has the following optional parameter:

- **-b**: set the name of the build directory. For example “-b build-vab820” in the command below.

```
$ cd via-release-bsp
$ MACHINE=imx6qvab820 source via-setup-release.sh -b build-vab820
```

3.3. Building a Firmware Installer

This BSP provides the “via-image-gui” Yocto image as default. Use the “bitbake” command to create the U-boot and image file.

```
$ via-release-bsp/build-vab820$ bitbake via-image-gui
```

After the compilation, the **via-release-bsp/build-vab820/tmp/depoy/images/imx6qvab820/FirmwareInstall/image**, directory will contain the resulting binaries, as shown in the table below.

Binary	Description
u-boot.bin	U-Boot boot loader
rootfs.tgz	Root file system
boot/ imx6q-vab820.dtb	device tree
boot/ zImage	Kernel image

Binary files generated by bitbake

Extract EVK/ VAB820_Yocto2.0_BIN_v4.1.1.tar.gz file.

Next to copy the new image folder to /sd_installer to replace the original image folder in order to update Firmware Installer.



Taiwan Headquarters

1F, 531 Zhong-zheng Road,
Xindian Dist., New Taipei City 231
Taiwan

Tel: 886-2-2218-5452
Fax: 886-2-2218-9860
Email: embedded@via.com.tw



USA

940 Mission Court
Fremont, CA 94539,
USA

Tel: 1-510-687-4688
Fax: 1-510-687-4654
Email: embedded@viatech.com



Japan

3-15-7 Ebisu MT Bldg. 6F,
Higashi, Shibuya-ku
Tokyo 150-0011
Japan

Tel: 81-3-5466-1637
Fax: 81-3-5466-1638
Email: embedded@viatech.co.jp



China

Tsinghua Science Park Bldg. 7
No. 1 Zongguancun East Road,
Haidian Dist., Beijing, 100084
China

Tel: 86-10-59852288
Fax: 86-10-59852299
Email: embedded@viatech.com.cn



Europe

Email: embedded@via-tech.eu